

# CLP Series Programming Steps

## CLP1010 and CLP1040 Front Panel Programmability

Radio programming mode provides you with the ability to configure the following settings from a pre-programmed list without the use of a computer.

- Channels
- Frequencies
- Codes (CTCC/DPL)

### Programming your CLP1010 or CLP1060

1. Before starting, make sure the device is powered OFF.
2. Press the PTT, “+” button and Power button at the same time and hold for 3 to 5 seconds until you hear a “chirp” sound and the voice prompt “Programming Mode”.  
Note: The LED Indicator should start blinking a green heartbeat.
3. Press the Menu button to select the settings you want to change:
  - Channel (for multi-channel models)
  - Frequency
  - Code
4. The voice announcements indicate the menu items and their current settings. To change, press “+/-” buttons; to go to the next menu item, press Menu button.
5. To exit the Advanced Radio Configuration Mode, press and hold the PTT button until you hear a “beep” sound.
6. Resume normal radio operation

**Important: All channels must be on the same frequency and code to communicate.**

**Advanced programming features are available via the free Computer Programming Software and optional CLP programming cable.**

**Cloning CLP radios is available and instructions are in the user manual online.**

