




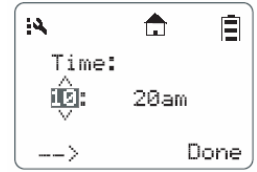


# DTR410™ PROGRAMMING STEPS

## Setting Date & Time

1. Press the 
2. Select Settings
2. Select Clock/Alarm
3. Select Time by pressing  under Change
4. Change Date using same interface as above



## To enter Programming Mode:

1. Hold down  and press the PTT button three times and release
2. Press the right 
3. Press the down 
4. Press the left 
5. Hold down  and press the PTT button three times




## Add a Public Group (must be in programming mode)

1. Select Contacts from the Program Menu
2. Select [New Contact]
3. Select Channel number (1 of 10) (same as Frequency)
4. Change Name using the Mini Keyboard (if required)
5. Select a Group ID (1 of 50) (Same as Code)
6. Select Save, Back & Reset








## Delete a Public Group (must be in programming mode)



1. Select Contacts from the Program Menu
2. Select [Public #] to remove
3. Press the 
4. Select Delete
5. Select Yes
6. Select Back & Reset



## Cloning Radios

### To enter Cloning Mode:

1. Hold down  and press the PTT button three times
2. Press the left 
3. Press the up 
4. Press the right 
5. Hold down  and press the PTT button three times
6. Select Duplicate Radio from Clone Menu
7. Connect Cloning Cable to both radios
8. Select Clone
9. Select Back & Reset

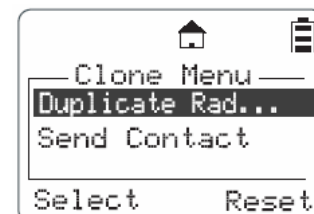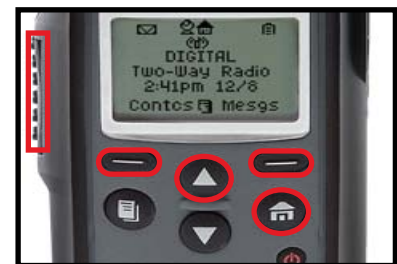

For further programming, please refer to the manual or contact Motorola at 800-501-8614. Press 0 for XTN, CLS or Spirit, then press 2 for programming.



**MOTOROLA**